

# SmarTemp Control 2.0

Precision Bunk Temperature Management



On/Off Button

Smart Indicator LED's

- Red for Heat Mode
- Blue for Vent Mode
- Blinking Red for Diagnostic Codes

Ambient Temperature Display

Menu Select Button

Ergonomic Comfort Dial

Set Temperature Display

## The SmarTemp Control 2.0 Features:

- Controls Webasto Air Top 2000 ST bunk heaters
- 24 hour programmable heater start time
- Large backlit LCD screen
- Displays heater fault codes
- Easy USB connection for PC diagnostics
- Displays set temperature and ambient bunk temperature
- Password protected options for preventive maintenance reminders, low voltage disconnect threshold, adjustable run time, Fahrenheit & Celsius measurements
- Menu language is available in English, French or Spanish

Heating your  
bunk just got **Easier**

# SmarTemp Control *fx* 2.0

Timed Engine Pre-Heat



## The SmarTemp Control *fx* 2.0 Timer for Coolant Heaters:

- Easy to program heater start times
- Up to 4 different timer settings per day
- LCD screen displays mode and remaining time
- "Week at a glance" screen view for 7 days of timer settings
- Timer settings saved (Even if power is lost)
- Manual / Auto Modes
- 12 or 24 Volt operation
- Skip Function (One time event)
- English, French, Spanish
- Diagnostic code descriptions and blink codes
- Error Code List (Last 5 errors)
- Adjustable low voltage disconnect (LVD) threshold
- Hour Meter – displays the number of hours the heater has run
- Adjustable Run Time (10-120 minutes)
- Password Protection

Heating your  
Fleet just got **Easier**

Webasto Thermo & Comfort  
North America, Inc.

15083 North Road  
Fenton, Michigan 48430  
USA

Toll Free: 800-860-7866  
Phone: 810-593-6000

[webasto.com](http://webasto.com)